




- ⓓ Montage- und Bedienanleitung
- ⒸⓃ 安裝及操作指南
- ⒸⓏ Návod k instalaci a k použití
- Ⓔ Instrucciones de montaje y de manejo
- Ⓔⓢ Paigaldamine ja kasutamine
- Ⓕ Instructions de montage et d'utilisation
- ⒼⒹ Installation and operating instructions
- Ⓖⓚ ΟΔΗΓΙΕΣ ΕΓΚΑΤΑΣΤΑΣΗΣ ΚΑΙ ΣΥΝΤΗΡΗΣΗΣ
- Ⓕ Szerelési és használati utasítás
- Ⓘ Istruzioni di montaggio e per l'uso
- Ⓕⓣ Montavimo ir naudojimo instrukcija
- ⒻⓂ Montāžas un lietošanas instrukcija
- ⒼⓁ Montagehandleiding en Gebruiksaanwijzing
- ⒻⓁ Instrukcja montażu i obsługi
- Ⓡⓞ Instrucțiuni de montaj și utilizare
- Ⓡⓞⓤⓢ Руководство по монтажу и эксплуатации
- ⓀⓁ Návod na montáž a obsluhu
- ⓀⓁⓞ Navodila za montažo in uporabo
- ⓇⓂ Інструкція по монтажу та експлуатації
- ⓇⓂⒺ تعليمات التركيب والتشغيل

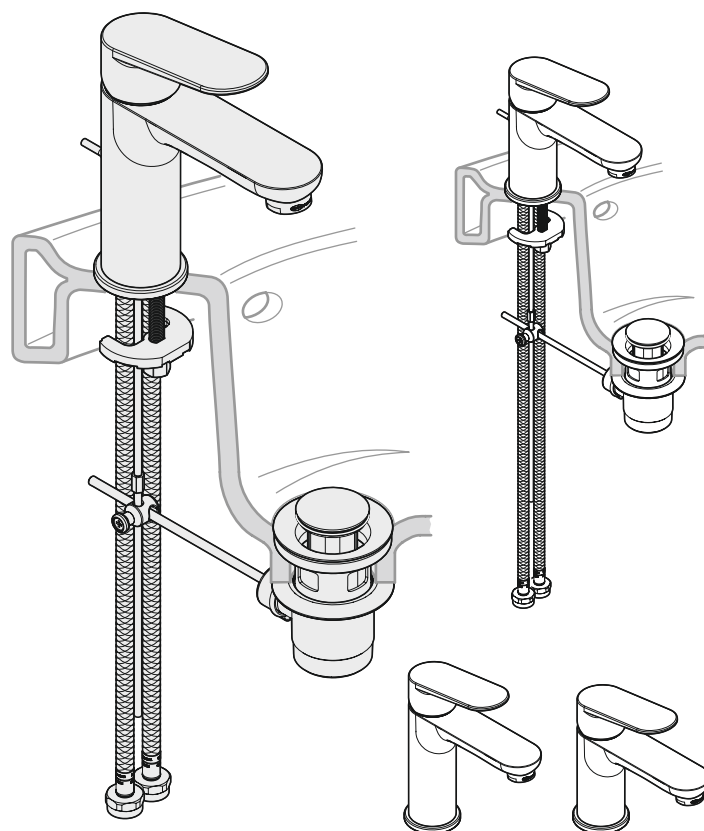


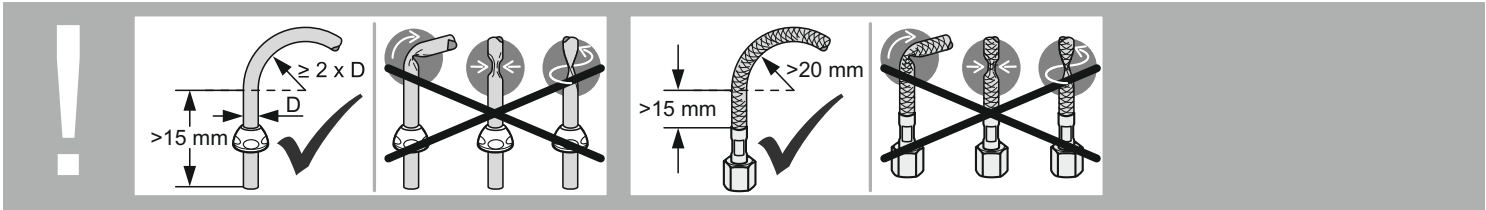


1.

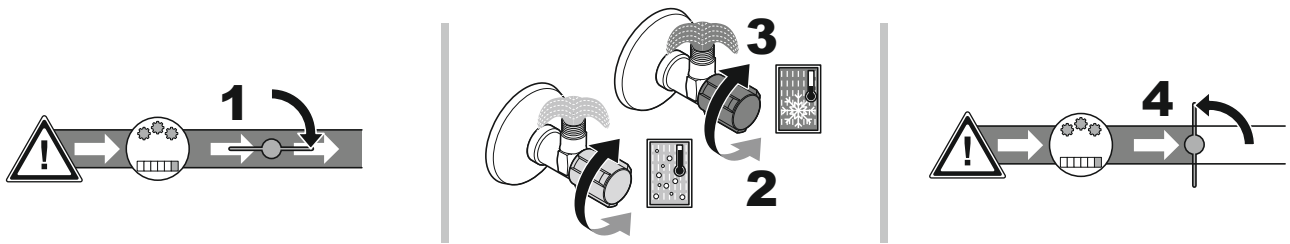


2.

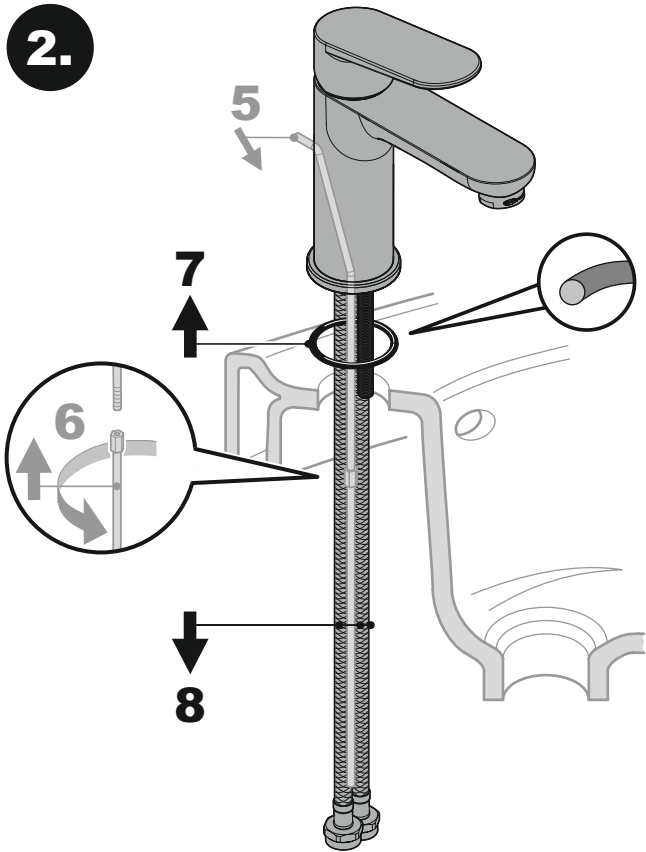

3.

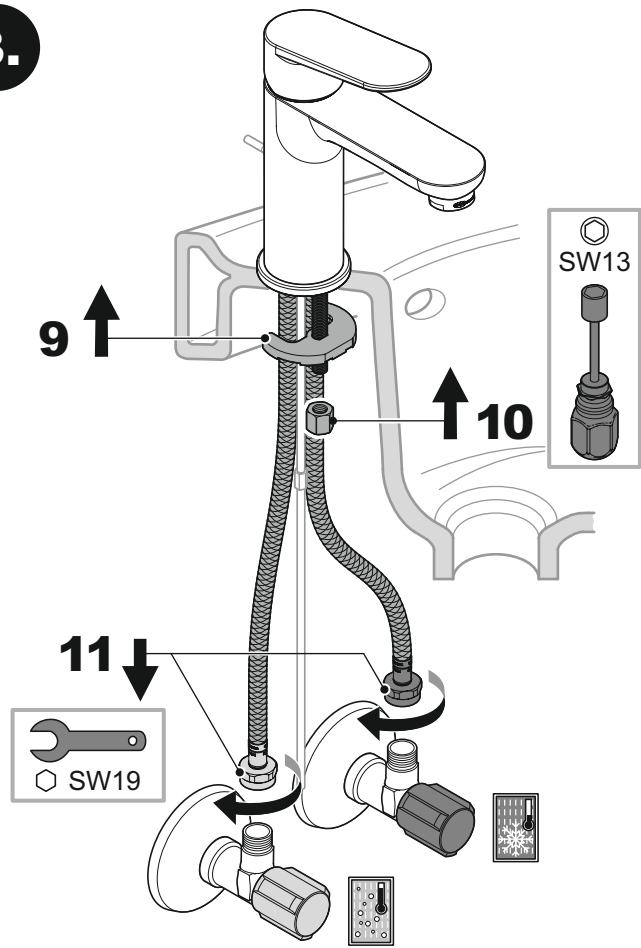

4.

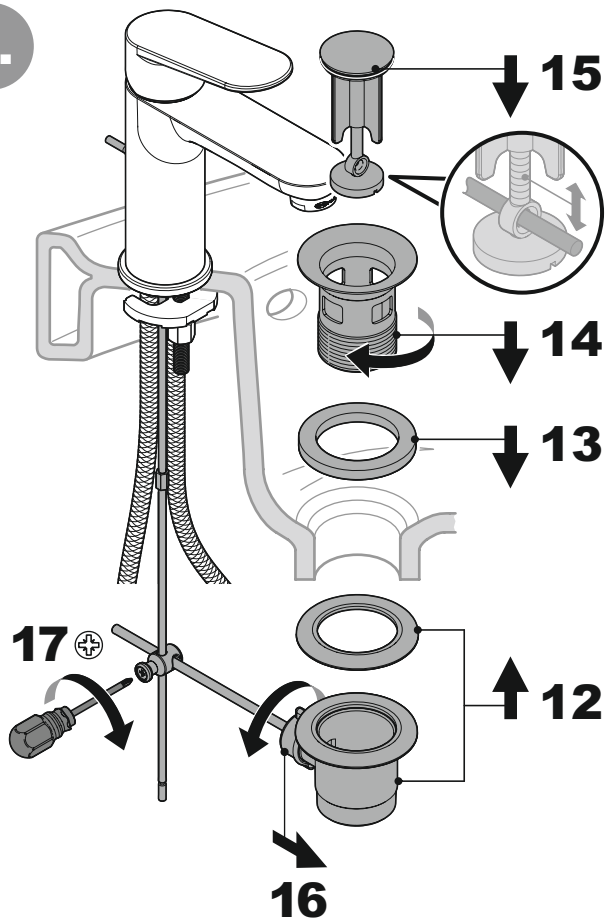

5.

