 

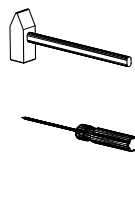


TKAPO/205/4F FIÓKOS KAMRASZEKRÉNY 1 / 4 OLDAL

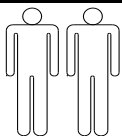


45min

Ø8

Ø5

<p>KO 01 8*30 40x</p> 	<p>KN 03 7*50 30x</p> 	<p>PL 12 14x</p> 
<p>VG 03 4x</p> 	<p>EU 01 6*11 24x</p> 	<p>DR 27 3,5*16 30x</p> 
<p>SP 01 2x</p> 	<p>KV 01 1,5*20 40x</p> 	<p>PL 01 1x</p> 
<p>KL 01 4mm 1x</p> 	<p>UC 06 4x</p> 	<p>UC 10 (128mm) 2x</p> 
<p>DR 25 4*25 8x</p> 	<p>PL 16 1x</p> 	<p>HK 01 1x</p> 

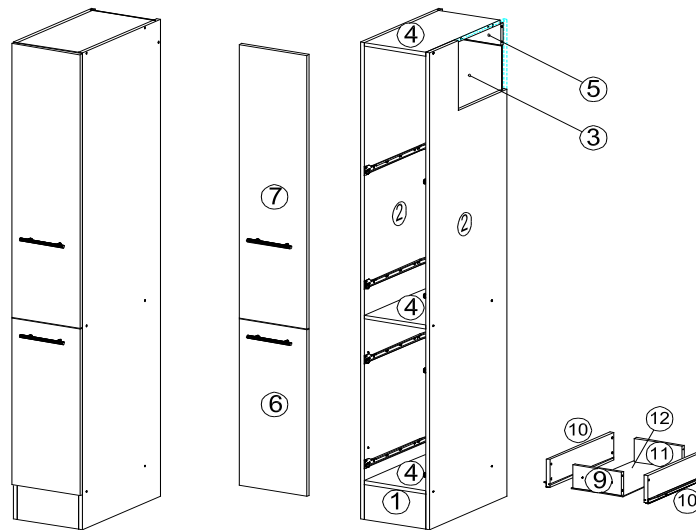

<p>16*2050*555 2x</p> <p>②</p>	<p>16*268*531 3x</p> <p>④</p> <p>16*268*150 1x</p> <p>①</p> <p>16*210*100 4x</p> <p>⑪</p> <p>16*210*100 4x</p> <p>⑨</p> <p>16*268*93 1x</p> <p>⑤</p> <p>16*450*120 8x</p> <p>⑩</p>	<p>3*223*450 4x</p> <p>⑫</p> <p>3*1898*281 1x</p> <p>③</p>	<p>APO30F-SG1-es csomagban</p> <p>18*1177*297 1x</p> <p>⑦</p> <p>APO30F-SG1-es csomagban</p> <p>18*716*297 1x</p> <p>⑥</p>
------------------------------------	--	--	--




**A lábazat védelme érdekében
a lábazat köré
húzzon egy szilikon csíkot.**


TKAPO/205/4F FIÓKOS KAMRASZEKRÉNY 2 / 4 OLDAL

Schublade Tip.01


1.

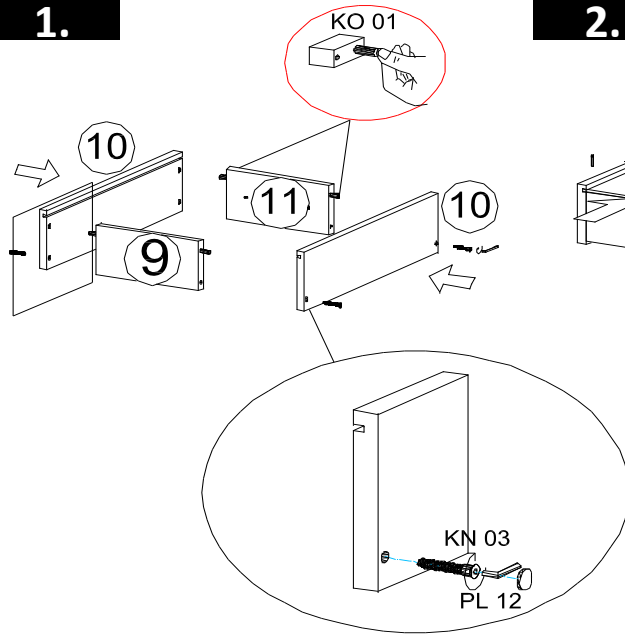



2.

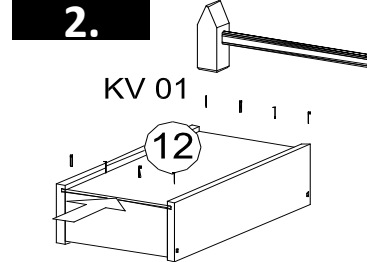

3.

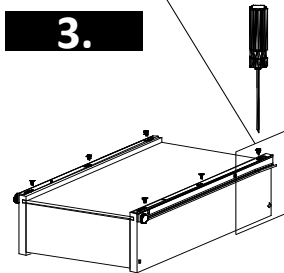

4.

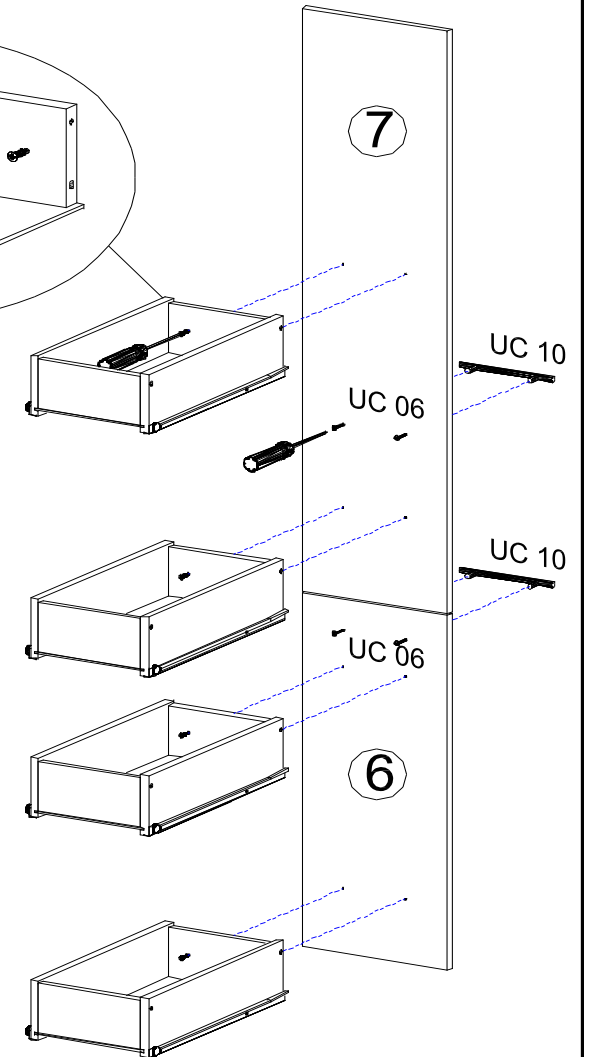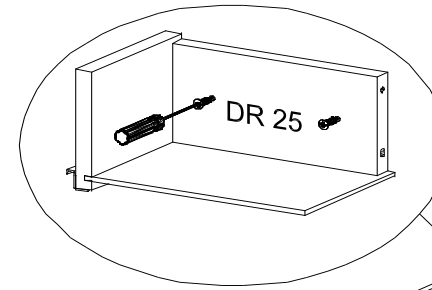


TKAPO/205/4F FIÓKOS KAMRASZEKRÉNY 3 / 4 OLDAL

1.B

Schublade Tip.02

Aufbau Illustration.

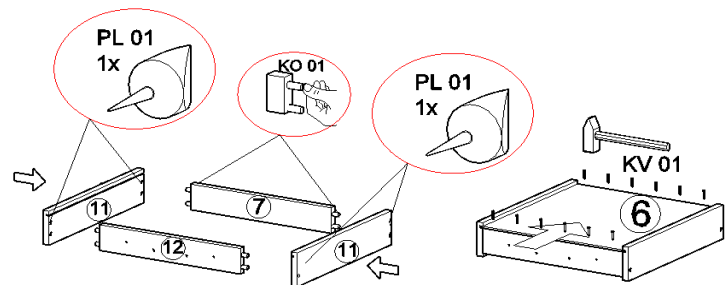

a,



b,



c,



d,



e,



f,



TKAPO/205/4F FIÓKOS KAMRASZEKRÉNY 4 / 4 OLDAL

