

# ASSEMBLY INSTRUCTION


DE - MONTAGEANWEISUNG  
 FR - INSTRUCTIONS DE MONTAGE  
 DK - MONTAGEVEJLEDNING  
 CZ - NÁVOD K MONTÁŽI  
 ES - INSTRUCCIONES DE MONTAJE  
 FI - ASENNUSOHJE

HR - UPUTE ZA MONTAŽU  
 SE - MONTERINGSANVISNING  
 SI - NAVODILA ZA MONTAŽO  
 TR - MONTAJ TALIMATI  
 NO - MONTASJEANVISNING  
 IT - ISTRUZIONI DI MONTAGGIO


GR - ΟΔΗΓΙΑ ΣΥΝΑΡΜΟΛΟΓΗΣΗΣ  
 NL - MONTAGE INSTRUCTIE  
 PT - INSTRUÇÕES DE MONTAGEM  
 PL - INSTRUKCJA MONTAŻU  
 HU - SZERELÉSI UTASÍTÁS




25 min

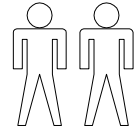

- |   |  |     |                                |   |  |     |                                |
|---|--|-----|--------------------------------|---|--|-----|--------------------------------|
| ① |  | x 6 | HW-ST-01-006<br>(4 x 15)       | ⑥ |  | x 8 | HW-ST-07-062<br>(8.5x12.5x1.5) |
| ② |  | x 4 | HW-ST-01-136<br>(4 x 20)       | ⑦ |  | x 2 | HW-ST-04-060<br>(49x30x6)      |
| ③ |  | x 2 | HW-ST-02-021<br>(6 x 20)       | ⑧ |  | x 1 | HW-ST-18-001<br>(4 x 98)       |
| ④ |  | x 8 | HW-ST-02-109<br>(8 x 60)       | ⑨ |  | x 1 | HW-ST-18-007<br>(13x88)        |
| ⑤ |  | x 8 | HW-ST-07-044<br>(8.5 x 18 x 1) |   |  |     |                                |

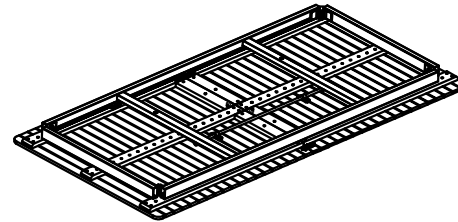


Ⓐ x1  
SU-TB-AS-0688

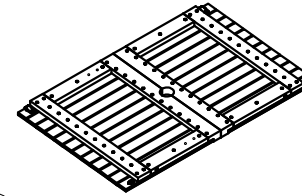

Ⓑ x1  
SU-TB-TF-2035




Ⓒ x1  
C-A-TB-SU-0913

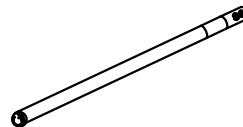

Ⓓ x4  
SU-TB-LF-1201



Ⓔ x4  
C-A-TB-SP-0308

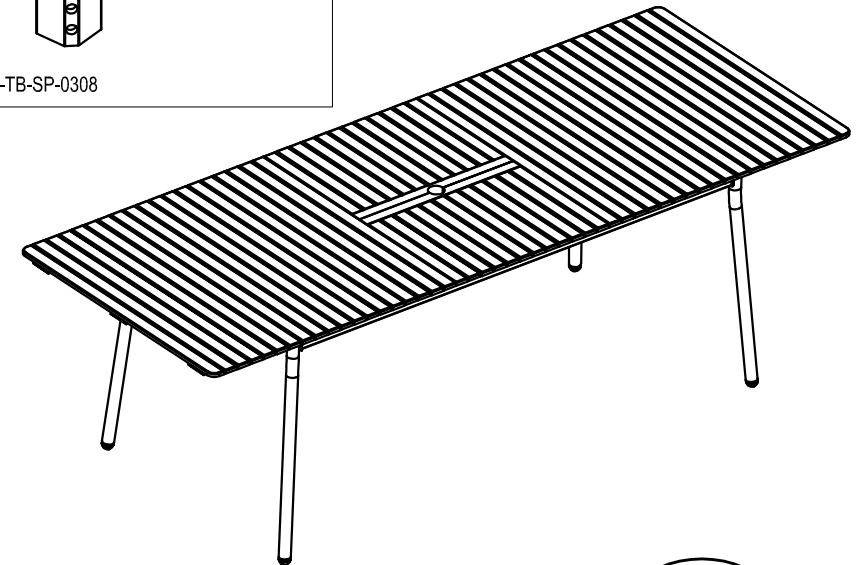

MADE FOR:  
 Bauhaus Szakáruházak  
 Kereskedelmi Bt.,  
 Pallag utca 9,  
 2120 Dunakeszi,  
 Hungary

